

Contents

1.Specification(DIO&AIO).....	5
1.1 DIO(Digital I/O Modules).....	5
a.Digital I/P Modules:	
EX 9041D, EX 9052D, EX 9053D	6
b.Photo MOS O/P Module:EX 9066D	6
c.Open Collector O/P Modules:	
EX 9042D, EX 9043D, EX 9044D,EX 9050D	7
d.Relay O/P Modules:	
EX 9060D, EX 9063D, EX 9065D, EX 9067D	8
e.Solid-State Relay O/P Modules:	
EX 9063AD, EX 9065AD, EX 9063BD, EX 9065BD...	9
1.2 AIO (Analog I/O Modules)	
a.Analog I/O Modules:EX9016PD, EX9017F/14D, EX9018P/11PD, EX9033D	10
1.3 Application Note For DIO, AIO	11
1.4 INIT* Pin Operation For DIO, AIO	11
1.5 Module Status For DIO, AIO	11
1.6 Dual Watchdog Operation For DIO, AIO.....	12
2.EX9000 DIO Series.....	12
2.1 Reset Status	12
2.2 Digital O/P.....	13
2.3 Latch Digital I/P	14
2.4 Default Setting.....	14
2.5 Jumper Setting.....	15-16
2.6 Configuration Tables.....	15
2.7 Command(For EX9000 DIO &AIO)	17
2.7.1 %AANNTTCCFF(For DIO, AIO)	17
2.7.2 #**(For DIO, AIO).....	18
2.7.3 #AABBDD.....	19-21
2.7.4 #AAN	22
2.7.5 \$AA2(For DIO, AIO).....	23
2.7.6 \$AA4(For DIO, AIO).....	24

2.7.7 \$AA5	25
2.7.8 \$AA6	26
2.7.9 \$AAF(For DIO, AIO).....	27
2.7.10 \$AAM(For DIO, AIO)	28
2.7.11 \$AAC.....	29
2.7.12 \$AACN.....	30
2.7.13 \$AALS.....	31
2.7.14 @AA.....	32
2.7.15 @AA(Data)	33-34
2.7.16 ~AAO(Data)(For DIO, AIO).....	35
2.7.17 Host Watchdog	36
2.7.18 ~**	36
2.7.19 ~AA0	37
2.7.20 ~AA1	38
2.7.21 ~AA2	39
2.7.22 ~AA3EVV(For DIO, AIO)	40-41
2.7.23 ~AA4V.....	42-43
2.7.24 ~AA5V.....	44-45
3.EX9000 AIO Series--EX9014D, EX9017F, EX9016PD, EX9033D/11PD/13D/12FD.....	46
3.1 Digital I/P and Event Counter For AIO (11PD/12FD/14D/16PD).....	46
3.2 Digital O/P For AIO.....	46
3.3 H/L Alarm For AIO(11PD/12FD/14D/16PD).....	47
3.4 Transmitter For AIO.....	48
3.5 Linear Mapping(For 14D/16PD only)	48-49
3.6 Default Setting	50
3.6.1 For EX9017F/14D/12FD	50
3.6.2 For EX9016PD.....	50
3.6.3 For EX9013D/33D.....	51
3.7 Jumper Setting	51
3.7.1 For EX9017F/14D/12FD.....	51
3.8 Calibration.....	52

3.8.1 For EX9017F/14D/12FD	52
3.8.2 For EX9016PD	53-54
3.8.3 For EX9013D/33D.....	55
3.9 Configuration Tables.....	56
3.9.1 For EX9017F/14D/12FD.....	56-57
3.9.2 For EX9016PD	58-59
3.9.3 For EX9013D/33D	60-63
3.10 Command For EX9000 AIO Series	64
3.10.1 #AA.....	64
3.10.2 #AAN.....	65
3.10.3 \$AA0.....	66
3.10.4 \$AA1.....	67
3.10.5 \$AA3(For EX9016PD only)	68
3.10.6 \$AA3N(For EX9016PD only)	69
3.10.7 \$AA5VV	70
3.10.8 \$AA6.....	71
3.10.9 \$AA8.....	72
3.10.10 \$AA8V.....	73
3.10.11 \$AA9(Data)(For EX9014D/12FD/13D/33D/16PD only)	74
3.10.12 \$AAA(For EX9017F only).....	75
3.10.13 ~AAEV.....	76
3.10.14 AIO Alarm & Event Counter (Ex9014D/16PD/12FD/11PD only).....	77
3.10.15 @AADI	77
3.10.16 @AADO(Data).....	78
3.10.17 @AAEAT.....	79
3.10.18 @AAHI(Data)	80
3.10.19 @AALO(Data)	81
3.10.20 @AADA.....	82
3.10.21 @AACA	83
3.10.22 @AARH	84
3.10.23 @AARL.....	85

3.10.24 @AARE.....	86
3.10.25 @AACE.....	87
3.10.26 Linear Mapping (For EX9014D/16PD only)	88
3.10.27 \$AA3	88
3.10.28 \$AA5	89
3.10.29 \$AA6(SL)(SH)	90
3.10.30 \$AA7(TL)(TH).....	91
3.10.31 \$AAA	92
3.10.32 \$AAAV	93
3.10.33 @AA6.....	94
3.10.34 @AA6(SL)(SH).....	95
3.10.35 @AA7.....	96
3.10.36 @AA7(TL)(TH)	97
3.10.37 @AAA	98
3.10.38 @AAAV	99
3.10.39 Excitation Voltage(For EX9016PD only)... 100	
3.10.40 \$AA6(F or EX9016PD)	100
3.10.41 \$AA7(Data)(For EX9016PD).....	101
3.10.42 \$AA S(F or EX9016PD)	102
3.10.43 \$AA EVV (For EX9016PD)	103
3.10.44 \$AA A(F or EX9016PD)	104
3.10.45 \$AA B(F or EX9016PD).....	105
4.EX9000 AIO Series--EX9011PD, EX9018P.....106	
4.1 Thermocouple Measurement	106
4.2 Default Setting	107
4.3 Jumper Setting	107
4.4 Calibration	108
4.5 Configuration Tables	109
4.6 Command (For EX9011PD, EX9018P).....	113
4.6.1 \$AA3 (For EX9011PD, EX9018P).....	113
4.6.2 \$AA9(Data) (For EX9011PD, EX9018P).....	114
4.6.3 \$AAB (For EX9011PD, EX9018P).....	115
4.6.4 \$AAZ (Data)(For EX9011PD, EX9018P).....	116

1. Specification(DIO&AIO)

1.1 DIO(Digital I/O Modules)

a. Digital I/P Modules:

EX 9041D, EX 9052D, EX 9053D

b. Photo MOS O/P Module:

EX 9066D

c. Open Collector O/P Modules:

EX 9042D, EX 9043D, EX 9044D, EX 9050D

d. Relay O/P Modules:

EX 9060D, EX 9063D, EX 9065D, EX 9067D

e. Solid-State Relay O/P Modules:

EX 9063AD, EX 9065AD, EX 9063BD, EX 9065BD

1.1 DIO (Digital I/O Modules)

a.

Digital Input Modules			
	EX9041D	EX9052D	EX9053D
Input Channels	14	8	16
Isolation	Isolation with Common Source	6 differential and 2 common ground	Non-Isolated
Isolation Voltage	3750 Vrms	5000 Vrms	Non-Isolated
Digital Level 0	+1V max	+1V max	+2V max
Digital Level 1	+4 to +30 V	+4 to +30 V	+4 to +30 V
Input Impedance	3K Ohms	3K Ohms	820 Ohms
Power Input	+10 to +30 VDC		
Power Consumption	0.9W	0.6W	0.9W

b.

Photo MOS Output Module	
	EX9066D
Output Channels	7
Load Current	0.13A
Load Voltage	350V max
Isolation Voltage	5000VAC
TurnOn Time	0.7mS typ
TurnOff Time	0.05mS typ
Power Input	+10 to +30 VDC
Power Consumption	0.8W

C.

Open Collector Output Modules				
	EX9042D	EX9043D	EX9044D	EX9050D
Output Channels	13	16	8	8
Isolation	Isolation with Common Power	Non Isolation	Isolation with Common Power	Non Isolation
Isolation Voltage	3750 Vrms		3750 Vrms	
Load Voltage	Max +30V			
Max Load Current	100mA		375 mA	30 mA
Input Channels	No Input		4	7
Isolation			Isolation with Common Source	Non Isolation
Isolation Voltage			3750 Vrms	
Digital Level 0			1V max	1V max
Digital Level 1			4 to 30V	3.5 to 30V
Input Impedance			3K Ohms	3K Ohms
Power Input			+10 to +30 VDC	
Power Consumption	1.7W	1.1W	1.7W	1.1W

d.

Relay Output Modules				
	EX9060D	EX9063D	EX9065D	EX9067D
Output Channels	4	3	5	7
Relay Type	RL1,RL2: Form A RL3,RL4: Form C	Form A	Form A	Form A
Contact Rating	0.6A @125VAC 2A @30VDC	5A@250VAC 5A@30VDC		0.5A @120VAC 1.0A @24VDC
Surge Strength	500V	4000V		1500V
Operate Time	3mS	6mS Max		5mS Max
Release Time	2mS	3mS Max		2mS Max
Min. Life	5*10 ⁵ ops.	10 ⁵ ops.		10 ⁵ ops.
Input Channels	4	8	4	No Input
Isolation	Isolation with Common Source			
Insolation Voltage	3750 Vrms			
Digital Level 0	+1V max			
Digital Level 1	+4 to +30 V			
Input Impedance	3K Ohms			
Power Input	+10 to 30VDC			
Power Consumption	1.9W	1.5W	2.2W	2.2W

e.

Solid-State Relay Output Modules				
	EX9063AD	EX9065AD	EX9063BD	EX9065BD
Output Channels	3	5	3	5
SSR Type	AC-SSR,Normal Open		DC-SSR, Normal Open	
Load Voltage Range	24 to 265 Vrms		3 to 30 VDC	
Leakage Current	1.5 mArms		0.1mA	
Max Load Current	1.0 Arms		1.0 A	
Min. Operate Time	1mS			
Min. Release Time	1/2 cycle + 1mS		1mS	
Dielectric Strength	2500Vrms			
Input Channels	8	4	8	4
Isolation	Isolation with Common Source			
Isolation Voltage	3750 Vrms			
Digital Level 0	+1V max			
Digital Level 1	+4 to +30 V			
Input Impedance	3K Ohms			
Power Input	+10 to +30 VDC			
Power Consumption	1.5W	1.6W	1.4W	1.5W

1.2 AIO (Analog I/O Modules)

a.

	Analog I/O Modules				
		EX9016PD	EX9017F/14D/12FD	EX9018P/11PD	EX9033D/13D
Analog	Resolution	16bit	12bit/16bit/12bit	16bit	16bit
	Input Channel	1 diff.	8diff./1diff./1 diff.	8diff./1 diff.	3 diff./1 Diff.
	Sampling rate	10HZ	75HZ/10HZ/100Hz	10HZ	15HZ
	Voltage I/P	+/-15mv +/-50mv +/-100mv +/-500mv +/-1v +/-2.5v	+/-150mv +/-500mv +/-1v +/-5v +/-10v	+/-15mv +/-50mv +/-100mv +/-500mv +/-1v +/-2.5v	x
	Current I/P	+/-20ma	±0mA*/±0mA/±0mA*	+/-20ma*	x
	Sensor I/P	6 wire	x	J.K.T.E.R.S B.N.C.L.M.	RTD(Pt,Ni)
	4.5 digit LED	√	x / √ / √	x / √	√
	Isolated Loop Power	x	x/√(15v)/x	x	x
	I/P Linear Scaling	√	x/√ /x	x	x
	Isolation	3000v	3000v	3000v	3000v
Digital	Digital I/P Channels	1	x / 1 / 1	x / 1	x
I/P &	Digital O/P Channels	4	x / 2 / 2	x / 2	x
Digital	Event Counter	√	x / √ / √	x / √	x
O/P	H/L Alarm	√	x / √ / √	x / √	x
Dual Watchdog Timer		√	√	√	√
Power I/P		+10v to +30v	+10v to +30v	+10v to +30v	+10v to +30v
Power Consumption		1.0w	1.3/1.9w/1.9w	1.0/1.5w	2.5w/2.2w

*With external 125 Ohms resister

1.3 Application Note For DIO, AIO

1.4 INIT* Pin Operation For DIO, AIO

Each EX9000 module has a build-in EEPROM to store configuration information such as address, type, baudrate and other information. Sometimes, user may forget the configuration of the module. Therefore, the EX9000 have a special mode named "**INIT mode**", to help user to resolve the problem. The "**INIT mode**" is setting as **Address=00, baudrate=9600bps, no checksum**

To enable INIT mode, please following these steps:

Step1. Power off the module

Step2. Connect the INIT* pin with the GND pin.

Step3. Power on

Step4. Send command \$002 (cr) in 9600bps to read the
Configuration stored in the module's EEPROM.

1.5 Module Status For DIO, AIO

Power On Reset or **Module Watchdog Reset** will let all output goto **Power On Value**. And the module may accept the host's command to change the output value.

Host Watchdog Timeout will let all output goto **Safe Value**. The module's status(readed by command~AA0) will be 04, and the output command will be ignored.

1.6 Dual Watchdog Operation For DIO, AIO

Dual Watchdog=Module Watchdog+Host Watchdog

The Module Watchdog is a hardware reset circuit to monitor the module's operating status. While working in harsh or noisy environment, the module may be down by the external signal. The circuit may let the module to work continues and never halt.

The Host Watchdog is a soft ware function to monitor the host's operating status. Its purpose is to prevent the network from communication problem or host halt. When the timeout interval expired, the module will turn all outputs to predefined Safe Value. This can prevent the controlled target from unexpected situation.

The EX9000 module with Dual Watchdog may let the control system more reliable and stable.

2. EX9000 DIO Series

2.1 Reset Status

The Reset Status is set while the module power on or reset by module watchdog, and is cleared while the command read Reset Status(\$AA5) applied. This is useful for user to check the module's working status. When the Reset Status is set means the module is reset and the output may be changed to the PowerOn Value. When the Reset Status is clear means the module is not reseted, and the output is not changed.

2.2 Digital O/P

The module's output have 3 different situation:

<1>**Safe Value.** If the host watchdog timeout status is set, the output is set to Safe Value. While the module receive the output command, like @AA(Date) or #AABBDD, the module will ignore the command and return"!", And will not change the output to the output command value. **The host watchdog timeout status is set and store into EEPROM while the host watchdog timeout interval expired, and only can be cleared by command~AA1.** If user want to change the output, he need to clear the host watchdog timeout status firstly , and send output command to change the output into desired value.

<2>**PowerOn Value.** Only the module reseted, and the host watchdog timeout status is clear, the module's output is set to predefined Power On Value.

<3> **Output Command Value.** If the host watchdog timeout status is clear, and user issue a digital output command, like @AA (Data) or #AABBDD, to module for changing the output value. The module will reponse success(receive>).

2.3 Latch Digital I/P

For example, use connect the key switch to grital input channel of a digital input/output module and want to read the key stroke. The Key input is a pulse digital input, and user will lost the strike. While reading by command \$AA6 in A and B position, the response is that no key stroke and he will lose the key stroke information. Respectly, the read latch low digital input command \$AAL0 will solve this problem. When issue \$AAL0 command in A and B position, the response denote that there is a low pulse between A and B position for a key stroke.



2.4 Default Setting

Default setting for Ex9000 DIO modules:

- . Address :01
- . Baudrate:9600bps
- . Type: Type 40 for DIO mode
- . Checksum Disable
- . EX9043D jumper setting at INIT*
- . EX9053D jumper setting at INIT*

2.5 Jumper Setting

EX9043D:Jumper J3 for select the pin INIT*/DO15

Select DO15 DO15  INIT*

Select INIT* DO15  INIT*(default)

EX9053D:Jumper J1 for select the pin INIT*/DI15

Select DI15 DI15  INIT*

Select INIT* DI15  INIT*(default)

2.6 Configuration Tables

Configuration Table of EX9000 DIO modules

Baudrate Setting(CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200

Type Setting(TT)

TYPE=**40** for DIO mode

Data Format Setting(FF)

7	6	5	4	3	2	1	0
*1	*2	0	0	0	*3		

*1: Counter Update Direction : 0=Falling Edge,
1=Rising Edge

*2: Checksum Bit : 0=Disable, 1=Enable

*3: 9050=0(Bit[2.1.0]=000),9060=1(Bit[2.1.0]=001)
 9052=2(Bit[2.1.0]=010),9053=3(Bit[2.1.0]=011)

Read Digital Input/Output Data Format

Data of \$AA6,\$AA4,\$AALS:(First Data)(Second Data)00

Data of @AA:(First Data)(Second Data)

	First Data		Second Data	
EX9041D	DI(8-13)	00 to 3F	DI(0-7)	00 to FF
EX9042D	DO(8-12)	00 to 1F	DO(0-7)	00 to FF
EX9043D	DO(8-15)	00 to FF	DO(0-7)	00 to FF
EX9044D	DO(1-8)	00 to FF	DI(1-4)	00 to 0F
EX9050D	DO(0-7)	00 to FF	DI(0-6)	00 to 7F
EX9052D	DI(0-7)	00 to FF	00	00
EX9053D	DI(8-15)	00 to FF	DI(0-7)	00 to FF
EX9060D	DO(1-4)	00 to 0F	DI(1-4)	00 to 0F
EX9063S ^{*1}	DO(1-3)	00 to 07	DI(1-8)	00 to FF
EX9065S ^{*2}	DO(1-5)	00 to 1F	DI(1-4)	00 to 0F
EX9066D	DO(1-7)	00 to 7F	00	00
EX9067D	DO(1-7)	00 to 7F	00	00
EX9063S ^{*1} :EX9063D/63AD/63BD				
EX9065S ^{*2} :EX9065D/65AD/63BD				

2.7 Command(For EX9000 DIO &AIO)

2.7.1 %AANNTTCCFF(For DIO,AIO)

Description : Set Module Configuration

Syntax:%AANNTTCCFF[CHK](cr)

% a delimiter character
AA address of setting/response module(00 to FF)
NN new address for setting response module(00 to FF)
TT type 40 for DIO module
CC new baudrate for setting module. It is needed to short the INIT* to ground while change baudrate.
FF new data format for setting module. It is needed to short the INIT* to ground to change checksum setting.

Response: Valid Command: **!AA**

Invalid Command: **?AA**

Example:

Command :%0102400600 Receive:!02

Set module address 01 to 02, return Success.

2.7.2 #** (For DIO, AIO)

Description : Synchronized Sampling

Syntax: #**[CHK](cr)

a delimiter Character

** synchronized sampling command

Response : No response

Example:

Command : #** No response

Send synchronized sampling command to all modules.

Command : \$014 Receive : !10F0000

Read synchronized data from address 01, return S=1, first read and data

Command \$014 Receive : !00F0000

Read synchronized data from address 02, return S=0, have readed and data.

2.7.3 #AABBDD

Description : Digital Output

Syntax : #AABBDD[CHK](cr)

delimiter character

AA address of reading module(00 to FF)

BBDD output command and parameter

For output multi-channel, the BB=00, 0A or 0B the select which output group, and the DD is the output value.

Parameter for Multi-Channel Output					
	Output Channels	DD for command #AABBDD			
		BB=00/0A		BB=0B	
EX9042D	13	00 to FF	DO(0-7)	00 to 1F	DO(8-12)
EX9043D	16	00 to FF	DO(0-7)	00 to FF	DO(8-15)
EX9044D	8	00 to FF	DO(1-8)	NA	NA
EX9050D	8	00 to FF	DO(0-7)	NA	NA
EX9060D	4	00 to 0F	RL(1-4)	NA	NA
EX9063S ^{*1}	3	00 to 07	RL(1-3)	NA	NA
EX9065S ^{*2}	5	00 to 1F	RL(1-5)	NA	NA
EX9066D	7	00 to 7F	RL(1-7)	NA	NA
EX9067D	7	00 to 7F	RL(1-7)	NA	NA
EX9063S ^{*1} Include:EX9063D/63AD/63BD					
EX9065S ^{*2} Include:EX9065D/65AD/65BD					

For output single-channel, the BB=1c, Ac or Bc where c is the selected channel, and the DD must be 00 to clear output and 01 to set output.

Parameter for Single-Channel Output				
	Single channel output command #AABBDD			
	c for BB=1c/Ac		c for BB=Bc	
EX9042D	0 to 7	DO(0-7)	0 to 4	DO(8-12)
EX9043D	0 to 7	DO(0-7)	0 to 7	DO(8-15)
EX9044D	0 to 7	DO(1-8)	NA	NA
EX9050D	0 to 7	DO(0-7)	NA	NA
EX9060D	0 to 3	RL(1-4)	NA	NA
Ex9063 S ^{*1}	0 to 2	RL(1-3)	NA	NA
Ex9065 S ^{*2}	0 to 4	RL(1-5)	NA	NA
EX9066D	0 to 6	RL(1-7)	NA	NA
EX9067D	0 to 6	RL(1-7)	NA	NA
Ex9063S ^{*1} Include:EX9063D/63AD/63BD				
Ex9065S ^{*2} Include:EX9065D/65AD/65BD				

Response : Valid Command: >

Invalid Command: ?

Ignored Command: !.

! Delimiter for ignore the command. The module's host watchdog timeout status is set, and the output is set to Safe Value.

Example :

Command : #0100FF Receive:>

Assume module is EX9044, set address 01 output value FF, return success

Command : #021001 Receive:>

Assume module is EX9067, set address 02 channel 0 on, Return success.

Command : #021701 Receive:?

Set address 02 channel 7 on, return the channel is invalid For EX9067 only have 7-channel outputs (0 to 6).

Command: #0300FF Receive:!

Set address 03 output value FF, return ignore, The module's host watchdog timeout status is set, and the output is set to Safe Value.

2.7.4 #AAN

Description : Read Digital Input Counter from channel N

Syntax : #AAN[CHK](cr)

delimiter character

AA address of reading/response module(00 to FF)

N channel to read

Response : Valid Command: **!AA(Data)**

Invalid Command. **?AA**

(Data) digital input counter value in decimal, from 00000 to 65535

Example :

Command : #032 Receive : !0300103

Read address 03 digital input counter value of channel 2,
return value 103.

Command : #025 Receive : ?02

Read address 02 digital input counter value of channel 5,
return the channel is not available.

2.7.5 \$AA2(For DIO, AIO)

Description : Read Configuration

Syntax : \$AA2[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

2 command for read configuration

Response : Valid Command: !AATTCCFF

Invalid Command. ?AA

TT type code of module, it must be 40

CC baudrate code of module

FF data format of module

Example :

Command : \$012 Receive : !01400600

Read address 01 status, return DIO mode, baud 9600, no checksum.

2.7.6 \$AA4(For DIO, AIO)

Description : Read Synchronized Data

Syntax : \$AA4[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

4 command for read synchronized data

Response : Valid Command: **!S(Data)**

Invalid Command. **?AA**

S status of synchronized data, 1=first read, 0=been readed

(Data) synchronized DIO value

Example :

Command : \$014 Receuve : ?01

Read address 01 synchronized data, return no data available.

Command : #** Receive : no response

Send synchronized sampling to all modules.

Command : \$014 Receive: !1000F00

Read address 01 synchronized data, return S=1, first read, and synchronized data 0F00

2.7.7 \$AA5

Description : Read Reset Status

Syntax : \$AA5[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

5 command for read reset status

Response : Valid Command: **!AAS**

Invalid Command. **?AA**

S reset status, 1=the module is been reset, 0=the
 module is not been reseted

Example :

Command : \$015 Receive : !011

Read address 01 reset status, return first read.

Command : \$015 Receive : !010

Read address 01 reset status, return no reset occurred.

2.7.8 \$AA6

Description : Read Digital I/O Status

Syntax : \$AA6[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

6 command for read digital input/output status

Response : Valid Command: **!(Data)**

Invalid Command. **?AA**

(Data) digital input/output value

Example :

Command : \$016

Receive : !0F0000

Assume module is Ex9060, read address 01 DIO status, return 0F00, digital input IN1 to IN4 are open, digital output RL1 to RL4 are off.

2.7.9 \$AAF(For DIO,AIO)

Description : Read Firmware Version

Syntax : \$AAF[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

F command for read firmware version

Response : Valid Command: **!AA(Data)**

Invalid Command. **?AA**

(Data) firmware version of module

Example :

Command : \$01F Receive : !01A2.0

Read address 01 firmware version,return version A2.0.

Command : \$02F Receive : !01B1.1

Read address 01 firmware version,return version B1.1.

2.7.10 \$AAM(For DIO,AIO)

Description : Read Module Name

Syntax : \$AAM[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

M command for read module name

Response : Valid Command: **!AA(Data)**

Invalid Command. **?AA**

(Data) Name of module

Example :

Command : \$01M Receive : !019042

Read address 01 module name, return name 9042.

Command : \$03M Receive : !039060D

Read address 03 module name, return name 9060D

2.7.11 \$AAC

Description : Clear Latched Digital Input

Syntax : \$AAC[CHK](cr)

\$ delimiter character

AA address of setting/response module(00 to FF)

C command for clear latched digital input

Response : Valid Command: !AA

Invalid Command. ?AA

Example :

Command : \$01L0 Receive : !01FFFF00

Read address 01 latch-low data, return FFFF.

Command : \$01C Receive : !01

Clear address 01 latched data, return success.

Command : \$01L0 Receive : !01000000

Read address 01 latch-low data, return 0000.

2.7.12 \$AACN

Description : Clear Digital Input Counter

Syntax : \$AACN[CHK](cr)

\$ delimiter character

AA address of setting/response module(00 to FF)

C command for clear digital input counter

N digital counter channel N to clear

Response : Valid Command: !AA

Invalid Command. ?AA

Example :

Command : #010 Receive : !0100123

Read address 01 input channel 0 counter value, return 123

Command : \$01C0 Receive : !01

Clear address 01 input channel 0 counter value, return success.

Command : #010 Receive : !0100000

Read address 01 input channel 0 counter value, return 0.

2.7.13 \$AALS

Description : Read Latched Digital Input

Syntax : \$AALS[CHK](cr)

\$ delimiter character

AA address of reading/response module(00 to FF)

L command for read latched digital input

S 1=select latch high status, 0=select latch low status

Response : Valid Command: **!(Data)**

Invalid Command. **?AA**

(Data) readed status 1=the input channel is latched, 0=the input channel is not latched.

Example :

Command : \$01L1 Receive : !012300

Read address 01 latch-high data, return 0123.

Command : \$01C Receive : !01

Clear address 01 latched data, return success.

Command : \$01L1 Receive : !000000

Read address 01 latch-high data, return 0.

2.7.14 @AA

Description : Read Digital Input/Output Status

Syntax : @AA[CHK](cr)

@ delimiter character

AA address of reading/response module(00 to FF)

Response : Valid Command: >(Data)

Invalid Command. ?AA

(Data) readed DIO status

Example :

Command : @01 Receive : >0F00

Read address 01 DIO status, return 0F00.

2.7.15 @AA(Data)

Description : Set Digital Output

Syntax : @AA(Data)[CHK](cr)

@ delimiter character

AA address of setting/response module(00 to FF)

(Data) output value, the data format is following:

(Data) is one character for output channel less than 4

For EX9060D, from 0 to F

For EX9063D/63AD/63BD, from 0 to 7

(Data) is two characters for output channel less than 8

For EX9044D/50D, from 00 to FF

For EX9065D/65AD/65BD, from 00 to 1F

For EX9066D/67D, from 00 to 7F

(Data) is four characters for output channel less than 16

For EX9042D, from 0000 to 1FFF

For EX9043D, from 0000 to FFFF

Response : Valid Command: >

Invalid Command: ?

Ignore Command: !

! delimiter for ignore command. The module is in Host Watchdog Timeout Mode, and the output is set to safe value.

Example :

Command : @017

Receive :>

Output address 01 value 7, return success.(The example is suitable for EX9060D/63D/63AD/63BD)

Command : @0200

Receive :>

Output address 02 value 00, return success. (The example is suitable for EX9044D/50D/65D/65AD/65BD/66D/67D)

Command : @030012

Receive :!

Output address 03 value 0012, return the module is in host watchdog timeout mode, the output command is ignored.(The example is suitable for EX9042D/43D)

2.7.16 ~AAO(Data)(For DIO,AIO)

Description : Set Module Name

Syntax : ~AAO(Data)[CHK](cr)

~ delimiter character

AA address of setting/response module(00 to FF)

O command for set module name

(Date) new name for module, max 6 characters

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:~01O9050 Receive :!01

Set address 01 module name 9050, return success.

Command : \$01M Receive :!019050

Read address 01 module name,return name 9050.

2.7.17 Host Watchdog(For DIO, AIO)

2.7.18 ~**

Description : Host OK.

Host send this command to all modules for send the information "Host OK"

Syntax :~[CHK](cr)**

~ delimiter character

** command for all modules

Response : No response

Example :

Command:~** No response

2.7.19 ~AA0

Description : Read Module Status.

Syntax : ~AA0[CHK](cr)

~ delimiter Character

AA address of reading/response module(00 to FF)

0 command for read module status

Response : Valid Command: !AASS

Invalid Command: ?AA

SS module status, 00=host watchdog timeout status is clear,04=host watchdog timeout status is set. The status will store into EEPROM and only may reset by the command~AA1.

2.7.20 ~AA1

Description : Reset Module Status.

Syntax : ~AA1[CHK](cr)

~ delimiter Character

AA address of setting/response module(00 to FF)

1 command for reset module status

Response : Valid Command: **!AA**

Invalid Command: **?AA**

2.7.21 ~AA2

Description : Read Host Watchdog Timeout Value

Syntax : ~AA2[CHK](cr)

~ delimiter Character

AA address of reading/response module(00 to FF)

2 command for read host watchdog timeout value

Response : Valid Command: !AAEVV

Invalid Command: ?AA

E host watchdog enable status, 1=Enable, 0=Disable

VV timeout value in HEX format, each count is 0.1
second 01=0.1 second and FF=25.5 seconds

2.7.22 ~AA3EVV(For DIO,AIO)

Description : Set Host Watchdog Timeout Value

Syntax : ~AA3EVV[CHK](cr)

~ delimiter Character

AA address of setting/response module(00 to FF)

3 command for set host watchdog timeout value

E 1=Enable/0=Disable host watchdog

VV timeout value, from 01 to FF, each for 0.1 second

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : ~010 Receive : !0100

Read address 01 modules status, return host watchdog timeout status is clear.

Command : ~013164 Receive : !01

Set address 01 host watchdog timeout value 10.0 seconds and enable host watchdog, return success.

Command : ~012 Receive : !01164

Read address 01 host watchdog timeout value, return that host watchdog is enabled, and time interval is 10.0 seconds.

Command : ~** No response

Reset the host watchdog timer.

Wait for about 10 seconds and don't send command~**, the LED of module will go to flash. The flash LED indicates the host watchdog timeout status is set.

Command : ~010 Receive : !0104

Read address 01 module status, return host watchdog timeout status is set.

Command : ~012 Receive : !01064

Read address 01 host watchdog timeout value, return that host watchdog is disabled, and time interval is 10.0 seconds.

Command : ~011 Receive : !01

Reset address 01 host watchdog timeout status, return success And the LED of this module stop flash.

Command : ~010 Receive : !0100

Read address 01 module status, return host watchdog timeout status is clear.

2.7.23 ~AA4V

Description : Read Power On/Safe Value.

Syntax : ~AA4V[CHK](cr)

~ delimiter Character

AA address of reading/response module(00 to FF)

4 command for read Power On/Safe value

V P=read Power On Value, S=read Safe value

Response : Valid Command: **!AA(Data)**

Invalid Command: **?AA**

(Data) Power On Value or Safe Value

For EX9042D/43D(Data) is VVVV, where VVVV is the Power On Value (or Safe Value).

For other modules, (Data) is VV00, where VV is the Power On Value(or Safe Value).

Example :

Command : @010000 Receive : >

Output address 01 Value 0000, return success.

Command : ~015S Receive : !01

Set address 01 Safe Value, return success.

Command : @01FFFF Receive : >

Output address 01 Value FFFF, return success.

Command : ~015P Receive : !01

Set address 01 Power On Value, return success.

Command : ~014S Receive : !010000

Read address 01 Safe Value, return 0000.

Command : ~014P Receive : !01FFFF

Read address 01 Power On Value, return FFFF

2.7.24 ~AA5V

Description : Set Power On/Safe Value

Syntax : ~AA5V[CHK](cr)

~ delimiter Character

AA address of setting/response module(00 to FF)

5 command for set Power On/Safe value

V P=set current output as Power On Value, S=set current output as Safe Value

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : @01AA Receive : >

Output address 01 value AA, return success

Command : ~015P Receive : !01

Set address 01 Power On Value, return success

Command : @0155 Receive : >

Output address 01 value 55, return success.

Command : ~015S Receive : !01

Set address 01 Safe Value, return success.

Command : ~014P Receive : !01AA00

Read address 01 Power On Value, return Power On Value AA.

Command : ~014S Receive : !015500

Read address 01 Safe Value, return Safe Value 55.

3. EX9000 AIO Series--EX9014D, EX9017F, EX9016PD, EX9033D EX9013D/12FD/11PD

3.1 Digital I/P and Event Counter For AIO (EX9011PD/12FD/14D/16PD)

The digital input DI0 may work as event counter. The counter updates while the input changes from high level to low level. The counter is 16-bit width and useful for low speed count, frequency is lower than 50Hz.

3.2 Digital O/P For AIO

When the module power on, the host watchdog timeout status is checked first. If the status is set, the digital outputs (DO0 and DO1) of module will set to Safe Value. If the status is clear, the digital outputs will set to Power On Value.

If the host watchdog timeout status is set, the module will ignore the digital output command @AADO(Data).

3.3 H/L Alarm For AIO (EX9011PD/12FD/14PD/16PD)

Some analog input modules, like Ex9012, equip with the high/low alarm function. When the alarm function is enabled, the digital output DO0 is the low alarm indicator, DO1 is the high alarm indicator, and the digital output command to change the DO0 and DO1 is ignored. The alarm function is to compare the analog input value with given high alarm value and low alarm value. There are two alarm types as follows:

Momentary Alarm:the alarm status is cleared while the analog input is not exceed the alarm value.

If Analog Input Value>High Alarm, DO1(High alarm) is on, else DO1 is off.

If Analog Input Value<Low Alarm, DO0(Low alarm) is on, else DO0 is off.

Latch Alarm:the alarm is cleared only the user send command to clear.

If Analog Input Value>High Alarm, DO1(High alarm) is on, else if Analog Input Value<Low Alarm, DO0(Low alarm) is on.

3.4 Transmitter For AIO

Transmitter is an instrument to convert the signal from the sensor to 4-20mA or 0-5V signal level. Transmitters may support driving or compensation circuit for sensor, and the output is after linearization and amplification.

2-wire transmitter, typical 4 to 20mA current output signal. One for power input, the other is signal output.

3-wire transmitters, typical 0 to 5V voltage output signal. One pair for power input and ground and the other is signal output.

3.5 Linear Mapping (For EX9014D/16PD only)

Linear mapping function is to translate the input value to the desired output value. The linear mapping is a mechanism that convert the analog input value into physical quantity.

Linear mapping have some values to given: mapping source low value(SL) to target low value(TL). source high value (SH) to target high value(TH). For input value (AI), the output value is:

If $AI < SL$, output value = -19999. (under limit)

else if $AI > SH$, output value = +19999. (over limit)

else output value = $(AI - SL) / (SH - SL) * (TH - TL) + TL$

For example, if we connect a temperature sensor to

EX9014D, and the sensor output is 4mA while the temperature is 0 degree Celsius, 20mA while the temperature is 100 degree Celsius. We want to read the temperature directly. We have the source values, 4 to 20mA, and target values, 0 to 100 degree Celsius.

Suppose the EX9014D is address 01, and baud 9600 bps, no-checksum.

1. Set the EX9014D to read 20mA type.

Command: %01010D0600 Receive: !01
(Ref %AANNTTCFF)

2. Set the source low value(SL)=4 and source high value (SH)=20.

Command: \$016+04.000+20.000 Receive: !01
(Ref ~AA6(SL)(SH))

3. Set the target low value(TL)=0 and target high value (TH)=100.

Command: \$017+000.00+100.00 Receive: !01
(Ref \$AA7(TL)(TH))

4. Enable linear mapping function.

Command: \$01A1 Receive: !01
(Ref \$AAAV)

Then we'll get the temperature value from EX9014D directly for command #AA.

3.6 Default Setting

3.6.1 For EX9017F/14D/12FD

Default setting for EX9014D/17F/12FD

Address:01

Analog Input Type:Type 08, -10 to +10 V

Baudrate:9600bps

60 Hz filter rejection, Checksum disable, engineer unit format

EX9017F set as 6 differential and 2 single-ended mode

EX9017F set as Fast Mode

3.6.2 For EX9016PD

Default setting for EX9016PD

Address:01

Analog Input Type : Type 05, -2.5 to +2.5V

Baudrate : 9600bps

Checksum disable, engineer unit format, 60Hz, filter

3.6.3 For EX9033D/13D

Default setting for EX9033D/13D

Address:01

RTD Type : Type 20, Pt100, -100 to 100-

Baudrate : 9600bps


Checksum disable, engineer unit format

Filter at 60Hz rejection

3.7 Jumper Setting

3.7.1 For EX9017F/14D/12FD

EX9017F:Jumper JP1 for select the pin INIT*/Vin7-

Select 8 differential JP1  INIT*/Vin7-is set to Vin7-

Select INIT* mode, Jp1  Vin7- is set to INIT*

3.8 Calibration

3.8.1 For EX9017F/14D/12FD

Calibration Requirement for EX9014D/17F/12FD

While calibrate type 0D, the EX9014D/17F/12FD need connect external shunt resistor, 125Ohms, 0.1%

Type Code	08	09	0A	0B	0C	0D
Zero Input	0V	0V	0V	0mV	0mV	0mA
Span Input	+10V	+5V	+1V	+500mV	+150mV	+20mA

Calibration Sequence:

1. Connect calibration voltage/current to module's input.
For EX9017F, connect to channel 0.
2. Warm-Up for 30 minutes
3. Setting type to 08
4. Enable Calibration (P.76)
5. Apply Zero Calibration Voltage
6. Perform Zero Calibration Command (P.67)
7. Apply Span Calibration Voltage
8. Perform Span Calibration Command (P.66)
9. Repeat step4 to step 8 three times.

Warning: Pls don' t calibrate before you really understand.

3.8.2 For EX9016PD

Analog Input Calibration Requirement EX9016PD


Type Code	00	01	02	03	04	05	06
Zero Input	0mV	0mV	0mV	0mV	0V	0V	0mA
Span Input	+15 mV	+50 mV	+100 mV	+500 mV	+1V	+2.5V	+20 mA

Calibration Sequence:

1. Connect calibration voltage/current to module's input channel 0
2. Wam-Up for 30 minutes
3. Setting Type to 00
4. Enable Calibration (P.76)
5. Apply Zero Calibration Voltage
6. Preform Zero Calibration Command (P.67)
7. Apply Span Calibration Voltage
8. Perform Span Calibration Command (P.66)
9. Repeat step4 to step8 three times.
- 10.Perform step1 to step 9 for each type with change the step3:setting type, step 5:zero calibration voltage, step7:span calibration voltage.

Warning: Pls don't calibrate before you really understand.

Excitation Voltage Calibration Requirement for Ex9016PD

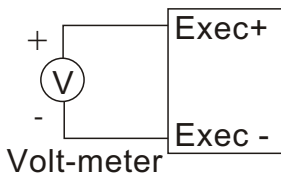

Calbration Sequence:

1. Connect voltmeter to module's excitation output pin.
2. Warm-Up for 30 minutes.
3. Output 0V.
4. Trim the output until the value in voltmeter is closest to 0V.
5. Perform Excitation Voltage Zero Calibration.
6. Output 10V.
7. Trim the output until the value in voltmeter is closest to 10V.
8. Perform Excitation Voltage Span Calibration.

Warning: Pls don't calibrate before you really understand.

3.8.3 For EX9033D/13D

Calibration Requirement for EX9033D/13D

Type	Zero Calibration Resistor	Span Calibration Resistor
20 to 29	0 ohm/55 ohm	375.0ohm
2A	0 ohm	3200.0ohm

Calibration Sequence:

1. Connect calibration resistor to module by 4-wire RTD connection. For EX9033D/13D, connect to channel 0
2. Warm-Up for 30 minutes
3. Setting Type to 20
4. Enable Calibration
5. Install Zero Calibration Resistor
6. Perform Zero Calibration Command
7. Install Span Calibration Resistor
8. Perform Span Calibration Command
9. Repeat step4 to step8 three times.

Warning: Pls do not calibration before you really understand.

3.9 Configuration Tables

3.9.1 For Ex9017F/14D/12FD

Configuration Table of Ex9014D/17F/12FD

Baudrate Setting(CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200

Analog Input Type Setting(TT)

Type Code	08	09	0A	0B	0C	0D
Min. Input	-10V	-5V	-1V	-500mV	-150mV	-20mA
Max Input	+10V	+5V	+1V	+500mV	+150mV	+20mA

Data Format Setting (FF)

7	6	5	4	3	2	1	0
*1	*2	*3	0	0	0	*4	

*1:0=60Hz rejection

1=50 Hz rejection

*2:Checksum Bit:0=Disable, 1=Enable

*3:Fast/Normal Bit:0=Normal, 1=Fast

(For EX9017F/12FD only)

*4:00=Engineer Unit Format

01=Percent Format

10=2's Complement HEX Format

Analog input type and data format table

Type Code	Input Range	Data Format	+F.S.	Zero	-F.S.
08	-10 to +10 V	Engineer Unit	+10.000	+00.000	-10.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
09	-5 to +5 V	Engineer Unit	+5.0000	0.0000	-5.0000
		% of FSR	+100.00	000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
0A	-1 to +1 V	Engineer Unit	+1.0000	+0.0000	-1.0000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
0B	-500 to +500 mV	Engineer Unit	+500.00	+000.00	-500.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
0C	-150 to +150 mV	Engineer Unit	+150.00	+000.00	-150.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
0D	-20 to +20 mA	Engineer Unit	+20.000	+00.000	-20.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000

3.9.2 For EX9016PD

Configuration Table of 9016PD

Baudrate Setting(CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200

Analog Input Type Setting(TT)

00:-15mV to +15mV

01:-50mV to +50mV

02:-100mV to +100mV

03:-500mV to +500mV

04:-1V to +1V

05:-2.5V to +2.5V

06:-20mA to +20mA

Data Format Setting (FF)

7	6	5	4	3	2	1	0
*1	*2	0	0	0	0	*3	

*1:Filter Select: 0=60Hz rejection

1=50 Hz rejection

*2:Checksum Bit:0=Disable, 1=Enable

*3:00=Engineer Unit Format

01=Percent Format

10=2's Complement HEX Format

Analog input type and data format table

Type Code	Input Range	Data Format	+F.S.	Zero	-F.S.
00	-15 to +15 mV	Engineer Unit	+15.000	+00.000	-15.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
01	-50to 50 mV	Engineer Unit	+50.000	+00.000	-50.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
02	-100to +100 mV	Engineer Unit	+100.00	+000.00	-100.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
03	-500 to +500 mV	Engineer Unit	+500.00	+000.00	-500.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
04	-1 to +1V	Engineer Unit	+1.0000	+0.0000	-1.0000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
05	-2.5 to +2.5 V	Engineer Unit	+2.5000	+0.0000	-2.5000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
06	-20 to +20 mA	Engineer Unit	+20.000	+00.000	-20.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000

3.9.3 For EX9033D/13D

Configuration Table of EX9033D/13D

Baudrate Setting(CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200

RTD Type Setting(TT)

Type Code	RTD Type	Temperature Range
20	Platinum 100, $\alpha=0.00385$	-100 to +100
21	Platinum 100, $\alpha=0.00385$	0 to 100
22	Platinum 100, $\alpha=0.00385$	0 to 200
23	Platinum 100, $\alpha=0.00385$	0 to 600
24	Platinum 100, $\alpha=0.003916$	-100 to 100
25	Platinum 100, $\alpha=0.003916$	0 to 100
26	Platinum 100, $\alpha=0.003916$	0 to 200
27	Platinum 100, $\alpha=0.003916$	0 to 600
28	Nickel 120	-80 to 100
29	Nickel 120	0 to 100
2A	Platinum 100, $\alpha=0.00385$	-200 to 600

Data Format Setting (FF)

7	6	5	4	3	2	1	0
*1	*2	0	0	0	0	*3	

*1:Filter Select: 0=60Hz rejection

1=50 Hz rejection

*2:Checksum Bit:0=Disable, 1=Enable

*3:00=Engineer Unit Format

01=Percent Format

10=2's Complement HEX Format

11=Ohms

RTD type and data format table

Type Code	RTD Type	Data Format	+F.S.	-F.S.
20	Platinum 100 =0.00385 -100 to 100 degree Celsius	Engineer Unit	+100.00	-100.00
		% of FSR	+100.00	-100.00
		2's complement HEX	7 FFF	8000
		Ohm	+138.50	+060.60
21	Platinum 100 =0.00385 0 to 100 degree Celsius	Engineer Unit	+100.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+138.50	+100.00
22	Platinum 100 =0.00385 0 to 200 degree Celsius	Engineer Unit	+200.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+175.84	+100.00
23	Platinum 100 =0.00385 0 to 600 degree Celsius	Engineer Unit	+600.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	8000
		Ohm	+313.59	+060.60
24	Platinum 100 =0.003916 -100 to 100 degree Celsius	Engineer Unit	+100.00	-100.00
		% of FSR	+100.00	-100.00
		2's complement HEX	7 FFF	8000
		Ohm	+139.16	+060.60
25	Platinum 100 =0.003916 0 to 100 degree Celsius	Engineer Unit	+100.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+139.16	+100.00

Type Code	RTD Type	Data Format	+F.S.	-F.S.
26	Platinum 100 =0.003916 0 to 200 degree Celsius	Engineer Unit	+200.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+177.13	+100.00
27	Platinum 100 =0.003916 0 to 600 degree Celsius	Engineer Unit	+600.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+317.28	+100.00
28	Nickel 120 -80 to 100 degree Celsius	Engineer Unit	+100.00	-080.00
		% of FSR	+100.00	-080.00
		2's complement HEX	7 FFF	999A
		Ohm	+200.64	+066.60
29	Nickel 120 0 to 100 degree Celsius	Engineer Unit	+100.00	+000.00
		% of FSR	+100.00	+000.00
		2's complement HEX	7 FFF	0000
		Ohm	+200.64	+120.60
2A	Platinum 1000 =0.00385 -200 to 600 degree Celsius	Engineer Unit	+600.00	-200.00
		% of FSR	+100.00	-033.33
		2's complement HEX	7 FFF	AAAA
		Ohm	+3137.1	+185.20

RTD Overage/Underrange Reading

	Over Range	Under Range
Engineer's Unit	+9999	-0000
Perencent of FSR	+9999	-0000
2's Complement HEX	7FFF	8000

3.10 Command For Ex9000 AIO Series

3.10.1 #AA

Description : Read Analog Input

Syntax : #AA[CHK](cr)

delimiter character

AA address of reading/response module(00 to FF)

Response : Valid Command: >(Data)

(Data) analog input value for its format while use #AA command to EX9017F, the data is the combination for each channel respectively.

Example :

Command :#01 Receive : >+02.635

Read address 01, get data successfully.

Command : #02 Receive :>4C53

Read address 02, get data in HEX format successfully.

Command : #04

Receive:>+05.123+04.153+07.234-02.356+10.000-05.133+02.345+08.234

The module address 04 is EX9017F. Read address 04 for getting data of all 8 channels.

3.10.2 #AAN

Description : Read Analog Input from channel N

Syntax : #AAN[CHK](cr)

delimiter character

AA address of reading/response module(00 to FF)

N channel to read, from 0 to 7

Response : Valid Command: >(Data)

Invalid Command: ?AA

(Data) analog input value for its format

Example :

Command :#32 Receive : >+02.513

Read address 03 channel 2, get data successfully.

Command : #029 Receive : ?02

Read address 02 channel 9, return error channel number.

3.10.3 \$AA0

Description : Perform Span Calibration

Syntax : \$AA0[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

0 command for performing span calibration

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : \$010 Receive : !01

Perform address 01 span calibration, return success.

Command : \$020 Receive : ?02

Perform address 02 span calibration, return not enable calibration before perform calibration command.

Warning: Pls don't calibrate before you really understand.

3.10.4 \$AA1

Description : Perform Zero Calibration

Syntax : \$AA1[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

1 command for performing zero calibration

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : \$011 Receive : !01

Perform address 01 zero calibration, return success.

Command : \$021 Receive : ?02

Perform address 02 zero calibration, return not enable calibration before perform calibration command.

Warning: Pls don't calibrate before you really understand.

3.10.5 \$AA3(For EX9016PD only)

Description : Read Channel Select

Syntax : \$AA3[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

3 command for reading channel select

Response : Valid Command: **!AA**

Invalid Command: **?AA**

N channel selected. The analog input command is applied to the channel N.

Example :

Command :\$013 Receive : !010

Read address 01 channel select, return channel 0 is selected.

3.10.6 \$AA3N(For EX9016PD only)

Description : Set Channel Select

Syntax : \$AA3N[CHK](cr)

\$ delimiter character

AA address of setting/response module (00to FF)

3 command for setting channel select

N channel N is selected.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command :\$0131 Receive : !01

Set address 01 channel select 1, return success.

Command :\$013 Receive : !011

Read address 01 channel select, return channel 1 is selected.

3.10.7 \$AA5VV(Not for EX9013/33D)

Description : Set Channel Enable

Syntax : \$AA5VV[CHK](cr)

\$ delimiter character

AA address of setting/response module (00to FF)

5 command for set channel enable

VV channel enable/disable, 00 is all disabled and FF is all enabled.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command :\$0155A Receive : !01

Set address 01 to enable channel 1,3,4,6 and disable channel 0,2,5,7 return success.

Command : \$016 Receive : !015A

Read address 01 channel status, return channel 1,3,4,6 are enabled and channel 0,2,5,7 are disabled.

3.10.8 \$AA6 (Not for EX9013/33D)

Description : Read Channel Status

Syntax : \$AA6[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

6 command for read channel status

Response : Valid Command: !AAVV

Invalid Command: ?AA

VV channel enable/disable, 00 is all disabled and FF is all enabled.

Example :

Command : \$015A5 Receive : !01

Set address 01 to enable channel 0,2,5,7 and disable channel 1,3,4,6, return success.

Command : \$016 Receive : !01A5

Read address 01 channel status, return channel 0,2,5,7 are enabled and channel 1,3,4,6 are disabled.

3.10.9 \$AA8 (For EX9013/33D only)

Description : Read LED Configuration

Syntax : \$AA8[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

8 command for reading LED configuration

Response : Valid Command: !AAV

Invalid Command: ?AA

V LED configuration

1=module control, 2=host control

Example :

Command :\$018 Receive : !011

Read address 01 LED configuration, return module control..

Command : \$028 Receive : !012

Read address 02 LED configuration, return host control.

3.10.10 \$AA8V (For EX9013/33D only)

Description : Set LED Configuration

Syntax : \$AA8V[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

8 command for setting LED configuration

V 1=Set LED to module, 2=Set LED to host

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : \$0182 Receive : !01

Set address 01 LED to host control, return success.

Command : \$0281 Receive : !02

Set address 02 LED to module control, return success.

3.10.11 \$AA9(Data)

(For EX9012FD/14D/13D/33D/16PD only)

Description : Set LED Data

Syntax : \$AA9(Data)[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

9 command for setting LED data

(Data) data for show on the LED, from -19999. to +19999.

The data format is sign, 5 numeral and decimal point.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : \$019+123.45 Receive : !01

Send address 01 LED data+123.45, return success.

Command : \$029+512.34 Receive : ?02

Send address 02 LED data +512.34, return the LED is not setting in the host mode.

3.10.12 \$AAA(For EX9017F only)

Description : Read 8 channel data

Syntax : \$AAA[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

A command for read 8 channel analog input data

Response : Valid Command: >(Data1)..(Data8)

Invalid Command: ?AA

(Data)..(Data8) 8 channel analog input data, in format 2's complement HEX.

Example :

Command :\$01A

Receive:>0000012301257FFF1802744F98238124

Read address 01 8-channel analog input data, return success.

3.10.13 ~AAEV

Description : Enable/Disable Calibration

Syntax : ~AAEV[CHK](cr)

~ delimiter character

AA address of setting/response module (00 to FF)

E command for enable/disable calibration

V 1=Enable/0=Disable calibration

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command : \$010 Receive : ?01

Perform address 01 span calibration, return the command is invalid before enable calibration.

Command : ~01E1 Receive : !01

Set address 01 to enable calibration, return success.

Command : \$010 Receive : !01

Perform address 01 span calibration, return success.

Warning: Pls don't calibrate before you really understand.

3.10.14 AIO Alarm & Event Counter (For EX9016PD/14D/12FD/11PD only)

3.10.15 @AADI

Description : Read Digital I/O and Alarm Status

Syntax : @AADI[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

DI command for reading digital input and alarm status

Response : Valid Command: **!AASOOII**

Invalid Command: **?AA**

S alarm enable status, 0=alarm disable, 1=momentary alarm enabled, 2=latch alarm enabled.

OO digital output status, 00=DO0 off, DO1 off, 01=DO0 on, DO1 off, 02=DO0 off, DO1 on, 03=DO0 on, DO1 on.

II digital input status, 00=input low level, 01=input high level.

Example :

Command:@01DI Receive:!0100001

Read address 01 digital input, return alarm disable, digital output all off, and digital input high level.

3.10.16 @AADO(Data)

Description : Set Digital Output

Syntax : @AADO(Data)[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

DO command for set digital output

(Data) output value, 00=DO0 off, DO1 off, 01=DO0 on, DO1 off, 02=DO0 off, DO1 on, 03=DO0 on, DO1 on

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01DO00

Receive:!01

Set address 01 digital output 00, return success.

3.10.17 @AAEAT

Description : Enable Alarm

Syntax : @AAEAT[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

EA command for enable alarm.

T alarm type, M=momentary alarm, L=latch alarm.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01EAM

Receive:!01

Set address 01 momentary alarm, return success.

3.10.18 @AAHI(Data)

Description : Set High Alarm

Syntax : @AAHI(Data)[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

HI command for set high alarm value

(Data) high alarm values, data format is in engineer unit format.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01HI+10.000

Receive:!01

Set address 01 high alarm+10.000, return success.

3.10.19 @AALO(Data)

Description : Set Low Alarm

Syntax : @AALO(Data)[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

LO command for setting low alarm value

(Data) low alarm values, data format is in engineer unit format.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01LO-10.000 Receive:!01

Set address 01 low alarm-10.000, return success.

3.10.20 @AADA

Description : Disable Alarm

Syntax : @AADA[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

DA command for disable alarm

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01DA Receive:!01

Disable address 01 alarm, return success.

3.10.21 @AACA

Description : Clear Latch Alarm

Syntax : @AACA[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

CA command for clear latch alarm

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01DI Receive:!0120101

Read address 01 digital input, return latch alarm mode, low alarm active.

Command:@01CA Receive:!01

Clear address 01 latch alarm, return success.

Command:@01DI Receive:!0120001

Read address 01 digital input, return latch alarm mode, no alarm active.

3.10.22 @AARH

Description : Read High Alarm

Syntax : @AARH[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

RH command for reading high alarm

Response : Valid Command: **!AA(Data)**

Invalid Command: **?AA**

(Data) high alarm value in engineer unit format.

Example :

Command:@01RH

Receive:!01+10.000

Read address 01 high alarm, return +10.000

3.10.23 @AARL

Description : Read Low Alarm

Syntax : @AARL[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

RL command for reading low alarm

Response : Valid Command: **!AA(Data)**

Invalid Command: **?AA**

(Data) low alarm value in engineer unit format.

Example :

Command:@01RL

Receive:!01-10.000

Read address 01low alarm, return-10.000

3.10.24 @AARE

Description : Read Event Counter

Syntax : @AARE[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

RH command for reading event counter

Response : Valid Command: **!AA(Data)**

Invalid Command: **?AA**

(Data) event counter value, from 00000 to 65535.

Example :

Command:@01RE

Receive:!0101234

Read address 01 event counter, return 1234.

3.10.25 @AAACE

Description : Clear Event Counter

Syntax : @AAACE[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

CE command for clear event counter

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01RE Receive:!0101234

Read address 01 event counter, return 1234.

Command:@01CE Receive:!01

Clear address 01 event counter, return success.

Command:@01RE Receive:!0100000

Read address 01 event counter, return 0.

3.10.26 Linear Mapping

(For EX9014D/16PD)

3.10.27 \$AA3(For EX9014FD only)

Description : Read Source Low/High Values for Linear Mapping

Syntax : \$AA3[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

3 command for reading source values

Response : Valid Command: **!AA(SL)(SH)**

Invalid Command: **?AA**

SL low limit of source values in engineer unit format.

SH high limit of source value in engineer unit format.

Example :

Command:\$013

Receive:!01-10.000+10.000

Reading address 01 source value, return from -10 to +10.

3.10.28 \$AA5(For EX9014FD only)

Description : Read Target Low/High Values for Linear Mapping

Syntax : \$AA5[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

5 command for reading target values

Response : Valid Command: !AA(TL)(TH)

Invalid Command: ?AA

TL target low values in engineer unit format.

TH target high values in engineer unit format.

Example :

Command:\$015 Receive:!01-10.000+10.000

Read address 01 target value, return from -10 to +10.

3.10.29 \$AA6(SL)(SH) (For EX9014FD only)

Description : Set Source Low/High Values for Linear Mapping. The data is stored into EEPROM after the command \$AA7(TL)(TH)applied.

Syntax : \$AA6(SL)(SH)[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

6 command for setting source values

SL source low level value in engineer unit format

SH source high level value in engineer unit format

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:\$016-10.000+10.000 Receive:!01

Set address 01 source value, -10 to +10, return success..

3.10.30 \$AA7(TL)(TH) (For EX9014FD only)

Description : Set Target Low/High Values for Linear Mapping The command follows \$AA6(SL)(SH) command.

Syntax : \$AA7(TL)(TH)[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

7 command for setting target values

TL target low level value in engineer unit format

TH target high level value in engineer unit format

Response : Valid Command: **!AA**

Invalid Command: **?AA**

Example :

Command:\$076-10.000+10.000 Receive:!01

Set address 01 target value-10 to +10, return success.

3.10.31 \$AAA (For EX9014FD only)

Description : Read Linear Mapping Status

Syntax : \$AAA[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

A command for reading linear mapping status

Response : Valid Command: !AA

Invalid Command: ?AA

V 0=disable linear mapping, 1=enable linear mapping

Example :

Command:\$01A Receive:!011

Read address 01 linear mapping status, return enable.

3.10.32 \$AAAV (For EX9014FD only)

Description : Enable/Disable Linear Mapping

Syntax : \$AAAV[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

A command for enable/disable linear mapping

V 0=disable linear mapping, 1=enable linear mapping

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:\$01A0 Receive:!01

Disable address 01 linear mapping, return success.

3.10.33 @AA6 (For EX9016PD only)

Description : Read Source Low/Hight Values for Linear Mapping

Syntax : @AA6[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

6 command for reading source values

Response : Valid Command: !AA(SL)(SH)

Invalid Command: ?AA

SL low limit of source values in engineer unit format.

SH high limit of source values in engineer unit format.

Example :

Command:@016 Receive:!01-2.5000+2.5000

Read address 01 source value, return from -2.5 to +2.5.

3.10.34 @AA6(SL)(SH) (For EX9016PD only)

Description : Set Source Low/Hight Values for Linear Mapping

Syntax : @AA6(SL)(SH)[CHK](cr)

@ delimiter character

AA address of setting/response module (00to FF)

6 command for setting source values

SL source low level value in engineer unit format

SH source high level value in engineer unit format

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@016-2.5000+2.5000 Receive:!01

set address 01 source value -2.5 to +2.5, return success.

3.10.35 @AA7 (For EX9016PD only)

Description : Read Target Low/Hight Values for Linear Mapping

Syntax : @AA7[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

7 command for reading target values

Response : Valid Command: !AA(TL)(TH)

Invalid Command: ?AA

TL target low values in engineer unit format.

TH target high values in engineer unit format.

Example :

Command:@017 Receive:!01-02.500+02.500

Read address 01 target value, return from -2.5 to +2.5.

3.10.36 @AA7(TL)(TH) (For EX9016PD only)

Description : Set Target Low/Hight Values for Linear Mapping

Syntax : @AA7(TL)(TH)[CHK](cr)

@ delimiter character

AA address of setting/response module (00to FF)

7 command for setting target values

TL target low level value in engineer unit format

TH target high level value in engineer unit format

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@017-02.500+02.5000 Receive:!01

Set address 01 target value -2.5 to +2.5, return success.

3.10.37 @AAA(For EX9016PD only)

Description : Read Linear Mapping Status

Syntax : @AAA[CHK](cr)

@ delimiter character

AA address of reading/response module (00 to FF)

A command for reading linear mapping status

Response : Valid Command: **!AAV**

Invalid Command: **?AA**

V 0=disable linear mapping, 1=enable linear mapping

Example :

Command:@01A Receive:!011

Read address 01 linear mapping status, return enable

3.10.38 @AAAV (For EX9016PD only)

Description : Enable/Disable Linear Mapping

Syntax : @AAAV[CHK](cr)

@ delimiter character

AA address of setting/response module (00 to FF)

A command for enable/disable linear mapping

V 0=disable linear mapping, 1=enable linear mapping

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:@01A0 Receive:!01

Disable address 01 linear mapping, return success.

3.10.39 Excitation Voltage(For EX9016PD only)

3.10.40 \$AA6(For EX9016PD)

Description : Get Excitation Voltage Value.

Syntax : \$AA6[CHK](cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

6 command for reading excitation voltage value

Response : Valid Command: !AA

Invalid Command: ?AA

(Data) excitation voltage value, engineer unit format

Example :

Command:\$017+05.123 Receive:!01

Set address 01 excitation 5.123V, return success.

Command:\$016 Receive:!01+05.123

Read address 01 excitation voltage, return 5.123V

3.10.41 \$AA7(Data For EX9016PD)

Description : Excitation Voltage Output

Syntax : \$AA7(Data)[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

7 command for setting excitation voltage

Response : Valid Command: **!AA**

Invalid Command: **?AA**

Example :

Command:\$017+05.123 Receive:!01

Set address 01 excitation 5.123V, return success.

Command:\$016 Receive!01+05.123

Read address 01 excitation voltage, return 5.123V

3.10.42 \$AAS(For EX9016PD)

Description : Start-Up Voltage Output Configuration

Syntax : \$AAS[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

S command for setting Start-Up Voltage

Response : Valid Command: **!AA**

Invalid Command: **?AA**

Example :

Command:\$017+05.123 Receive:!01

Set address 01 excitation 5.123V, return success.

Command:\$01S Receive:!01

Set address 01 Start-Up Voltage, return success. The module's Start-Up Voltage is 5.123V now

3.10.43 \$AAEVV(For EX9016PD)

Description : Excitation Voltage Trim Calibration

Syntax : \$AAEVV[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

E command for performing trim calibration

VV trim value, 01~7F is increase 1~127 counts, and
FF~80 is decrease 1~128 counts. Each count is about
0.2 mV.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:\$017+05.123 Receive:!01

Set address 01 excitation 5.123V, return success.

Command:\$01E03 Receive:!01

Trim address 01 excitation voltage+0.6mV, return success.

3.10.44 \$AAA(For EX9016PD)

Description : Excitation Voltage Zero Calibration

Syntax : \$AAA[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

A command for excitation voltage zero calibration

Response : Valid Command: **!AA**

Invalid Command: **?AA**

Example :

Command:\$017+00.000 Receive:!01

Set address 01 excitation 0V, return success.

Command:\$01A Receive:!01

Perform address 01 zero calibration, return success.

3.10.45 \$AAB(For EX9016PD)

Description : Excitation Voltage Span Calibration

Syntax : \$AAB[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

B command for excitation voltage span calibration

Response : Valid Command: **!AA**

Invalid Command: **?AA**

Example :

Command:\$017+10.000 Receive:!01

Set address 01 excitation 10V, return success.

Command:\$01B Receive:!01

Perform address 01 span calibration, return success.

4. EX9000 AIO Series--EX9011PD, EX9018P

4.1 Thermocouple Measurement

When two wires composed of dissimilar metal are joined at one end and heated, the open circuit voltage is a function of the junction temperature and the composition of the two metals. All dissimilar metals exhibit this effect. The voltage is called "seebeck voltage". For small changes in temperature the Seebeck voltage is linearly proportional to temperature.

To measure the Seebeck voltage directly is not available because we must first connect a voltmeter to the thermocouple, and the voltmeter leads themselves create a new thermoelectric circuit. Therefore we need to eliminate the junction thermoelectric to measure to correct Seebeck voltage, and this is called "Cold Junction Compensation".

For most thermocouples, the Seebeck voltage is 0V while in 0 . One simple way to cancel the junction voltage is to put the junction into 0K environment and the junction voltage is 0V. Normally, this is not a good method for most application. Typical method is to measure the junction temperature by thermistor, and measure the junction voltage from the junction temperature. Then we may get the Seebeck voltage from measured thermocouple voltage and junction voltage, and we may calculate the temperature from the Seebeck voltage.

4.2 Default Setting

Default setting EX9011PD/18P

- . Address:01
- . Analog Input Type:Type 05, -2.5 to +2.5 V
- . Baudrate:9600bps
- . Checksum disable, 60HZ rejection, engineer unit format EX9018P set as INIT* mode, and the analog input is 6 differential and 2 single-ended.

4.3 Jumper Setting

EX9018P:Jumper Jp1 for select the pin INIT*/Vin7-
Select 8 differential mode, the pin INIT*/Vin7-is set
to Vin7-



JP1

Select INIT* mode, the pin INIT*/Vin7-is set to
INIT*



JP1

4.4 Calibration

Calibration Requirement for EX9011PD/18P

Type Code	00	01	02	03	04	05	06
Min. Input	0mV	0mV	0mV	0mV	0V	0V	0mA
Max. Input	+15 mV	+50 mV	+100 mV	+500 mV	+1V	+2.5V	+20 mA

Notification:

1. While calibrate type 06, need connect external shunt resistor, 125 ohms, 0.1%
2. Connect calibration voltage(or current)signal to module's input. For EX9018P, connect channel 0.
3. Before calibration, warm-up module about 30 minutes for better accuracy.

Example Calibration Sequence for type 00:

1. Setting type to 00
2. Enable Calibration (P.76)
3. Apply Zero Calibration Voltage(0m V)
4. Perform Zero Calibration Command (P.67)
5. Apply Span Calibration Voltage(15mV)
6. Perform Span Calibration Command (P.66)
7. Repeat step 1 to step 6 three times.

Calibration sequence for other type is similiar but different in step 1 to set different type.

Warning: Pls don't calibrate before you really understand.

4.5 Configuration Tables

Configuration Table of EX9011PD/18P

Baudrate Setting(CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200

Analog Input Type Setting(TT)

Type Code	00	01	02	03	04	05	06
Min. Input	-15 mV	-50 mV	-100 mV	-500 mV	-1V	-2.5V	-20 mA
Max. Input	+15 mV	+50 mV	+100 mV	+500 mV	+1V	+2.5V	+20 mA

Type Code	0E	0F	10	11	12	13	14	15	16	17	18
T.C. Type	J	K	T	E	R	S	B	N	C	L	M
Min Temp.	-210	-270	-270	-270	0	0	0	-270	0	-200	-200
Max Temp.	760	1372	400	1000	1768	1768	1820	1300	2320	800	100

The temperature is shown in degree Celsius

T.C. Type L and M for EX9011PD/18P

DATA Format Setting(FF)

7	6	5	4	3	2	1	0
*1	*2	0	0	0	0	*3	

*1:Filter Select:0=60Hz rejection 1=50Hz rejection

*2:Checksum Bit:0=Disable, 1=Enable

*3:00=Engineer Unit Format

01=Percent Format

10=2's Complement HEX Format

Analog input type and data format table

Type Code	Input Range	Data Format	+F.S.	Zero	-F.S.
00	-15 to +15 mV	Engineer Unit	+15.000	+00.000	-15.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
01	-50 to +50 mV	Engineer Unit	+50.000	0.0000	-50.000
		% of FSR	+100.00	000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
02	-100 to +100 mV	Engineer Unit	+100.00	+000.00	-100.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
03	-500 to +500 mV	Engineer Unit	+500.00	+000.00	-500.00
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
04	-1 to +1V	Engineer Unit	+1.0000	+0.0000	-1.0000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
05	-2.5 to +2.5 V	Engineer Unit	+2.5000	+00.000	-2.5000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000
06	-20 to +20 mA	Engineer Unit	+20.000	+00.000	-20.000
		% of FSR	+100.00	+000.00	-100.00
		2's complement HEX	7 FFF	0000	8000

Type Code	Input Range	Data Format	+F.S.	Zero	-F.S.
0E	J Type	Engineer Unit	+760.00	+00.000	-210.00
	-210 to 760	% of FSR	+100.00	+000.00	-027.63
	degreeCel sius	2's complement HEX	7 FFF	0000	DCA2
0F	K Type	Engineer Unit	+1372.0	+00.000	-0270.0
	-270 to 1372	% of FSR	+100.00	+000.00	-019.68
	degreeCel sius	2's complement HEX	7 FFF	0000	E6D0
10	T Type	Engineer Unit	+400.00	+000.00	-270.00
	-270 to 400	% of FSR	+100.00	+000.00	-067.50
	degreeCel sius	2's complement HEX	7 FFF	0000	A99A
11	E Type	Engineer Unit	+1000.0	+000.00	-0270.0
	-270 to 1000	% of FSR	+100.00	+000.00	-027.00
	degreeCel sius	2's complement HEX	7 FFF	0000	Dd71
12	R Type	Engineer Unit	+1768.0	+0000.0	+0000.0
	0 to 1768	% of FSR	+100.00	+000.00	+0000.0
	degreeCel sius	2's complement HEX	7 FFF	0000	0000
13	S Type	Engineer Unit	+1786.0	+0.0000	+0000.0
	0 to 1768	% of FSR	+100.00	+000.00	+0000.0
	degreeCel sius	2's complement HEX	7 FFF	0000	0000
14	B Type	Engineer Unit	+1820.0	+00.000	+0000.0
	0 to 1820	% of FSR	+100.00	+000.00	+000.0
	degreeCel sius	2's complement HEX	7 FFF	0000	0000

Type Code	Input Range	Data Format	+F.S.	Zero	-F.S.
15	N Type	Engineer Unit	+1300.0	+00.000	-0270.0
	-270 to 1300	% of FSR	+100.00	+000.00	-20.77
	degreeCel sius	2's complement HEX	7 FFF	0000	E56B
16	C Type	Engineer Unit	+2320.0	+00.000	+00.000
	0 to 2320	% of FSR	+100.00	+000.00	+000.00
	degreeCel sius	2's complement HEX	7 FFF	0000	0000
17 ^{*1}	L Type	Engineer Unit	+800.00	+000.00	-200.00
	-200 to 800	% of FSR	+100.00	+000.00	-025.00
	degreeCel sius	2's complement HEX	7 FFF	0000	E000
18 ^{*1}	M Type	Engineer Unit	+100.0	+000.00	-200.00
	-200 to 100	% of FSR	+050.00	+000.00	-100.00
	degreeCel sius	2's complement HEX	4000	0000	8000
*1:Only available for EX9011PD and EX9018P					

4.6 Command (For EX9011PD, EX9018P)

4.6.1 \$AA3 (for EX9011PD, EX9018P)

Description : Read CJC Temperature

Syntax : \$AA3(CHK)(cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

3 command for reading CJC temperature

Response : Valid Command: >(Data)

Invalid Command: ?AA

(Data) CJC temperature degree Celsius.

Example :

Command:\$033 Receive:>+0025.4

Read address 03 CJC temperature, return 25.4

4.6.2 \$AA9(Data) (For EX9011PD, EX9018P)

Description : Set CJC Offset Value

Syntax : \$AA9(Data)(CHK)(cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

9 command for setting CJC offset value

(Data) CJC offset value comprises a sign and 4 hexadecimal digits, from -1000 to +1000, each count is 0.01

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:\$019+0010 Receive:!01

Set address 01 CJC offset increase 16 counts (+0.16),
return success.

4.6.3 \$AAB (For EX9011PD)

Description : Thermocouple Open Detection

Syntax : \$AAB(CHK)(cr)

\$ delimiter character

AA address of reading/response module (00 to FF)

B command for reading thermocouple open status

Response : Valid Command: **!AAS**

Invalid Command: **?AA**

S 0=close-loop detection

 1=open-circuit detection, need to check the
 thermocouple

Example :

Command:\$01B Receive: !010

Read address 01 thermocouple open status, return the
thermocouple is close-loop.

4.6.4 \$AAZ (Data)(For EX9011PD, EX9018P)

Description : Set LED Data

Syntax : \$AAZ(Data)[CHK](cr)

\$ delimiter character

AA address of setting/response module (00to FF)

Z command for setting LED data

(Data) data for show on the LED, from -19999. to +19999.

The data need sign, 5 digits and decimal point.

Response : Valid Command: !AA

Invalid Command: ?AA

Example :

Command:\$01Z+123.45 Receive:!01

Send address 01 LED data+123.45, return success.

Command:\$02Z+512.34 Receive:?02

Send address 02 LED data+512.34, return the LED is not setting in the host mode.

4.6.5 #AAN (For EX9018P only)

Description : Read Analog Input from channel N

Syntax : #AAN[CHK](cr)

delimiter character

AA address of reading response module(00 to FF)

N channel to read, from 0 to 7

Response : Valid Command: >(Data)

Invalid Command: ?AA

(Data) analog input value for its format

Example :

Command :#32 Receive : >+02.513

Read address 03 channel 2, get data successfully.

Command : #029 Receive : ?02

Read address 02 channel 9, return error channel number.